


INTELLI-CYCLE

Programming the Intelli-Cycle Cycle Timer


1. To enter the programming mode press and hold both the Change button and the Set button for 3 seconds as shown here.

The screen will look like this.

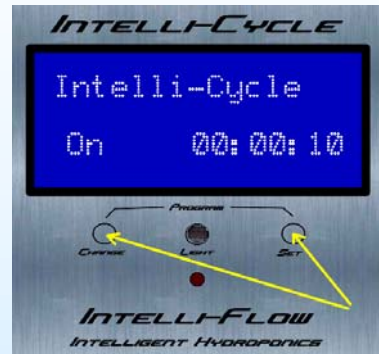


2. Press the Change button to change the selection. If you wish to program a different cycle to run during the dark than during the light press the Change button to show "Y", otherwise press Change until it shows "N". Press the Set button to save this entry.

The screen will change to look like this. If you selected "Y" for the light sensor you will program the On time for when it is light first. If you selected "N" you will program the On time only.

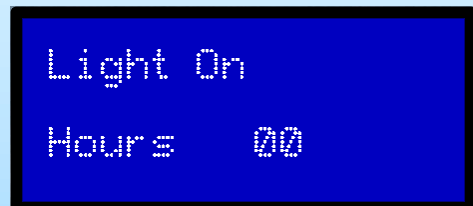

3. Programming the On time is done in 3 stages. You will set the hours, minutes and seconds separately. If the On time is over 1 hour press the change button until the correct number hours is showing. Press the Set button to save this entry.

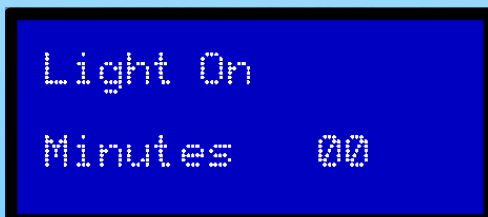

The screen will change to look like this.

4. Set the number of minutes for the On time by pressing the Change button until the correct number of minutes is showing. Press the Set button to save this entry.

The screen will change to look like this.



5. Repeat steps 2 – 4 to program the desired Off time.
6. If you selected “Y” for the light sensor you will now need to program the On and Off times for the dark period. Repeat the above steps to program in the desired times.



Once completed, or if you selected “N” for the light sensor the screen will change to look like this.

7. If you choose “N” for the start delay the first On cycle will start as soon as the Set button is pressed. In some instances you may wish for the On time to be delayed for a period. This may be the case if you are using the Intelli-Cycle to turn on lights in a 24 hour cycle and you wish the lights to come on at a certain time each day. An example would be that you wish the lights to turn on at 6pm but you are programming the timer at midday. In this case you would set the Start Delay to 6 hours. The Intelli-Cycle will then wait the 6 hours before turning on.

Set the Start Delay in the same way as setting the On or Off times. Press the Set button to continue and the Intelli-Cycle will save these settings and start the cycles.

8. If you wish to have no cycles during the Dark period, the easiest way to do this is program the Intelli-Cycle for use without the Light Sensor using the desired On and Off times for the light period. Then plug the Intelli-Cycle into the time switch that is switching your lights on. The Intelli-Cycle will now only run cycles when the lights are on.



NOTE: The backlight will go out after 20 seconds. To turn on the backlight press either button once.

www.intelli-cycle.com